 


ACTIVITY TRACKER
SCP-306
USER MANUAL · WARRANTY CARD

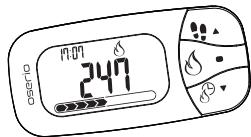

Please keep the instruction manual at hand all the time for future reference.

 
Customer name : _____
Purchase date : _____
Model No. : _____
Serial No. : _____

1 year warranty

Dealer Chop: _____

◎HOW TO WEAR THE ACTIVITY TRACKER

The unit should be worn in the front pocket of the clothing or pants. To use the strap within the package can provide the unit from falling out of your pocket.

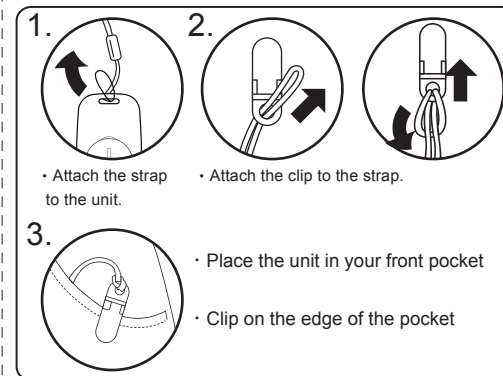

◎FEATURE

 
- 3D sensor precisely detects steps taken.
- Auto-analysis of calories burned and active time based on intensity of different sessions.
- Daily calories burning goal can be set and reviewed in the display
- "🔥" will appear when daily calories burned exceed your setting target.

◎CAUTIONS


General Cautions

1. Keep out of reach of young children.
 2. Contact your doctor or healthcare provider before beginning a weight losing or exercise program.
 3. This unit is water-resistant, suitable for splashing, not swimming or shower.
 4. Any modification/disassembly of this activity tracker is forbidden.
 5. Never use alcohol, detergent, cleaning chemicals or corrosive liquid to clean this device. Do not attempt to wash the device under pressure washers.
 6. Avoid excessive impact to the unit.
 7. Do not place the unit in the back pocket of your pants to prevent damages to the unit or injuries to individuals.
- ※ Usage of the unit must be consistent with the instructions provided in this manual.

◎MAIN UNIT

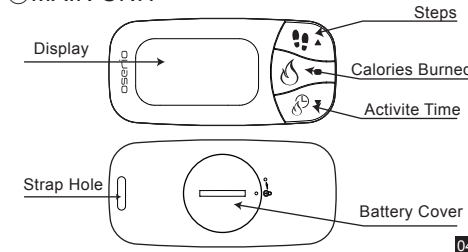


◎INSERT THE BATTERY (CR2032)

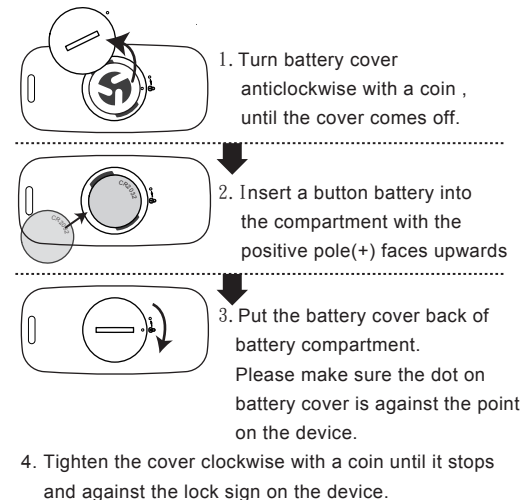 - 
1. Turn battery cover anticlockwise with a coin, until the cover comes off.
 2. Insert a button battery into the compartment with the positive pole(+) faces upwards
 3. Put the battery cover back of battery compartment. Please make sure the dot on battery cover is against the point on the device.
 4. Tighten the cover clockwise with a coin until it stops and against the lock sign on the device.

◎SETTINGS

 For the first time using the unit, follow the steps below.

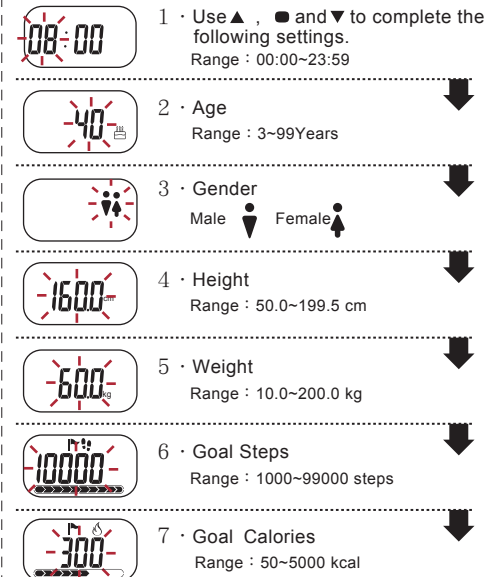- 
1. Use ▲, ● and ▼ to complete the following settings.
Range : 00:00~23:59
 2. Age
Range : 3~99Years
 3. Gender
Male ♀ Female ♂
 4. Height
Range : 50.0~199.5 cm
 5. Weight
Range : 10.0~200.0 kg
 6. Goal Steps
Range : 1000~99000 steps
 7. Goal Calories
Range : 50~5000 kcal

◎CARE AND MAINTENANCE

Battery Cautions

1. Be sure that the polarity of the battery is set properly.
2. Always use the type of battery indicated.
3. Replace a worn out battery with a new one.
4. Do not throw the battery into fire.

 
※When disposing the product, remove the battery and follow local regulations concerning environmental protection.

Maintenance

1. Clean the unit with a soft cloth.
2. Do not use any abrasive or volatile cleaners.
3. Store the unit in a safe and dry location.
4. Remove the battery if this device will not be used for extended period of time (approximately 3 months or longer).

07

AFTER SETTING



The display shows current calories burned with current time at the upper left corner.

◎ READINGS and BUTTONS



Steps/ Select

Calories Burned/ Enter/ Wake

Active Time/ Select

◎MEMORY FUNCTION

 
After repeatedly pressing each button, the display shows measurement memories of each day (up to last 7 days).



08

◎THE GOAL ACHIEVING MARK

When you achieve the goal, the mark is shown as below:

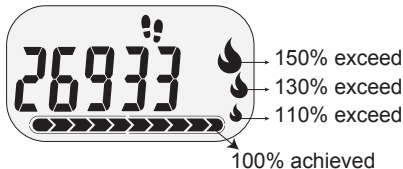

◎POWER SAVING

The display will automatically turn off after 1 minute without any operation. However, the unit continues counting steps. This mode extends the battery life. To activate the display, press "" again.

◎COUNTING STEPS

The unit counts and shows the steps only if more than 10 steps are continuously taken; this avoids accidentally shaking are counted.

 
◎ACTIVE TIME

By measuring the intensity of your sessions, the unit can calculate the amount of active time.

09

◎RESET THE UNIT

Follow the procedure below to clear and reset all the previous measurement memories and settings. Press and at the same time and hold for 4 seconds.

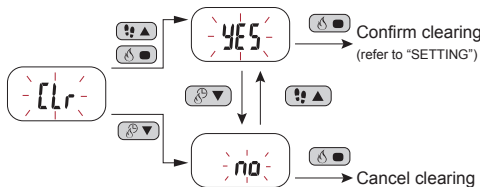

◎MODIFY USER SETTINGS

Press and at the same time and hold for 2 seconds to enter setting mode. It will start from time setting. It will automatically return to normal mode after 1 minute without any operation.

10

Term&Condition

1. Limited Warranty Period will start on the date of purchase and lasts for one year, ending on the first anniversary of the date of purchase. During the warranty period, the device will be either replaced or repaired with free of charge.
2. The warranty does not cover :
 - 1) Unauthorised changes, disassembly or modification
 - 2) Wear & tear parts
 - 3) Accidents or damage caused by non-compliance with the instruction manual
3. If you have any question regarding this warranty or the product, please contact your dealer or Customer Service. If the product need to be returned, warranty card completed by the dealer confirming date of purchase is necessary.

11

◎SPECIFICATIONS

Dimensions	80mm x 38mm x 11mm
Power Supply	CR2032 x 1pcs
Battery Life	Approx 3 months
Measurement Ranges	Steps: 0~99999
	Goal Steps: 1000~99000
	Calories Burned: 0~99999 kcal
	Goal Calories: 50~5000 kcal
	Time: 00:00~23:59
Active Time: 00:00~23:59	
Memory	Last 7 days
Operating Temp./Humidity	0°C ~ 40°C / 30% ~ 85% RH
Weight	24 g (With battery)
Contents	Battery, Strap, Clip and Manual

12